

Få din kostnadsfrie gave!

Kampanjeperiode
01.10.2025 – 31.03.2026

Kampanjekode „Battery25“



Order no.	EAN-Code	Product name	Type
614051500	4061792244993	Batteri borskrutrekker	BS 18 L
613155500	4061792245839	Batteri borskrutrekker	BS 18 L BL
613155710	4061792254541	Batteri borskrutrekker + mobile workshop	BS 18 L BL Set
613155800	4061792245846	Batteri borskrutrekker	BS 18 L BL
613155840	4061792245853	Batteri borskrutrekker	BS 18 L BL
613155850	4061792246225	Batteri borskrutrekker	BS 18 L BL
602325500	4007430326317	Batteri borskrutrekker	BS 18 LT BL
602325650	4061792229006	Batteri borskrutrekker	BS 18 LT BL
602325800	4007430334732	Batteri borskrutrekker	BS 18 LT BL
602325840	4007430297747	Batteri borskrutrekker	BS 18 LT BL
602325860	4061792123052	Batteri borskrutrekker	BS 18 LT BL
602325890	4007430302199	Batteri borskrutrekker	BS 18 LT BL
602325950	4007430336262	Batteri borskrutrekker	BS 18 LT BL
602334800	4007430334947	Batteri borskrutrekker	BS 18 LT BL Q
602334840	4007430297778	Batteri borskrutrekker	BS 18 LT BL Q
602334860	4061792173279	Batteri borskrutrekker	BS 18 LT BL Q
602334890	4007430302335	Batteri borskrutrekker	BS 18 LT BL Q
602358650	4061792187788	Batteri borskrutrekker	BS 18 LTX BL I
602358660	4061792187795	Batteri borskrutrekker	BS 18 LTX BL I
602358800	4061792206922	Batteri borskrutrekker	BS 18 LTX BL I
602358840	4061792188143	Batteri borskrutrekker	BS 18 LTX BL I
602358850	4061792188136	Batteri borskrutrekker	BS 18 LTX BL I
602359650	4061792187726	Batteri borskrutrekker	BS 18 LTX BL Q I
602359660	4061792187740	Batteri borskrutrekker	BS 18 LTX BL Q I
602359770	4061792187757	Batteri borskrutrekker	BS 18 LTX BL Q I
602359840	4061792188129	Batteri borskrutrekker	BS 18 LTX BL Q I
602359850	4061792188211	Batteri borskrutrekker	BS 18 LTX BL Q I
603180660	4061792211667	Batteri borskrutrekker	BS 18 LTX-3 BL Q I Metal
603180840	4061792211650	Batteri borskrutrekker	BS 18 LTX-3 BL Q I Metal
603180850	4061792211643	Batteri borskrutrekker	BS 18 LTX-3 BL Q I Metal
614053500	4061792245242	Batteri slagbormaskin	SB 18 L
614053710	4061792252226	Batteri slagbormaskin + mobile workshop	SB 18 L Set
613157500	4061792245945	Batteri slagbormaskin	SB 18 L BL

Order no.	EAN-Code	Product name	Type
613157710	4061792254534	Batteri slagbormaskin + mobile workshop	SB 18 L BL Set
613157840	4061792245969	Batteri slagbormaskin	SB 18 L BL
613157860	4061792245976	Batteri slagbormaskin	SB 18 L BL
602316500	4007430326324	Batteri slagbormaskin	SB 18 LT BL
602316800	4007430334718	Batteri slagbormaskin	SB 18 LT BL
602316840	4007430297808	Batteri slagbormaskin	SB 18 LT BL
602316890	4007430302359	Batteri slagbormaskin	SB 18 LT BL
602360650	4061792187863	Batteri slagbormaskin	SB 18 LTX BL I
602360840	4061792188181	Batteri slagbormaskin	SB 18 LTX BL I
602360850	4061792188174	Batteri slagbormaskin	SB 18 LTX BL I
602361650	4061792187825	Batteri slagbormaskin	SB 18 LTX BL Q I
602361660	4061792187832	Batteri slagbormaskin	SB 18 LTX BL Q I
602361840	4061792188167	Batteri slagbormaskin	SB 18 LTX BL Q I
602361850	4061792188150	Batteri slagbormaskin	SB 18 LTX BL Q I
603182660	4061792212138	Batteri slagbormaskin	SB 18 LTX-3 BL Q I Metal
603182840	4061792212121	Batteri slagbormaskin	SB 18 LTX-3 BL Q I Metal
603182850	4061792212114	Batteri slagbormaskin	SB 18 LTX-3 BL Q I Metal
602398840	4061792217256	Batteri muttertrekker	SSW 18 LT 300 BL
602398850	4061792217263	Batteri muttertrekker	SSW 18 LT 300 BL
602395800	4007430333292	Batteri muttertrekker	SSW 18 LTX 300 BL
602395840	4007430331885	Batteri muttertrekker	SSW 18 LTX 300 BL
602395890	4007430331892	Batteri muttertrekker	SSW 18 LTX 300 BL
602404650	4061792263956	Batteri muttertrekker	SSW 18 LTX 550 BL
602404800	4061792275485	Batteri muttertrekker	SSW 18 LTX 550 BL
602404840	4061792263963	Batteri muttertrekker	SSW 18 LTX 550 BL
602404850	4061792263970	Batteri muttertrekker	SSW 18 LTX 550 BL
602403650	4061792228702	Batteri muttertrekker	SSW 18 LTX 800 BL
602403660	4061792228719	Batteri muttertrekker	SSW 18 LTX 800 BL
602403840	4061792228726	Batteri muttertrekker	SSW 18 LTX 800 BL
602403850	4061792228733	Batteri muttertrekker	SSW 18 LTX 800 BL
602401660	4061792202061	Batteri muttertrekker	SSW 18 LTX 1450 BL
602401810	40617922020405	Batteri muttertrekker	SSW 18 LTX 1450 BL
602401840	4061792202092	Batteri muttertrekker	SSW 18 LTX 1450 BL
602401850	40617922020412	Batteri muttertrekker	SSW 18 LTX 1450 BL
602402660	40617922020429	Batteri muttertrekker	SSW 18 LTX 1750 BL
602402840	40617922020443	Batteri muttertrekker	SSW 18 LTX 1750 BL
602402850	40617922020450	Batteri muttertrekker	SSW 18 LTX 1750 BL
602396800	4007430334992	Batteri muttertrekker	SSD 18 LTX 200 BL
602396840	4007430330147	Batteri muttertrekker	SSD 18 LTX 200 BL
602396890	4007430330307	Batteri muttertrekker	SSD 18 LTX 200 BL
600324500	4061792191655	Batteri slagbormaskin	BH 18 LTX BL 16
600324840	4061792191679	Batteri slagbormaskin	BH 18 LTX BL 16
600324850	4061792191686	Batteri slagbormaskin	BH 18 LTX BL 16
601712510	4061792218260	Batteri kombihammer	KH 18 LTX 24
601712840	4061792218239	Batteri kombihammer	KH 18 LTX 24
601712850	4061792213197	Batteri kombihammer	KH 18 LTX 24
601712860	4061792218246	Batteri kombihammer	KH 18 LTX 24
601713660	4061792218536	Batteri kombihammer	KH 18 LTX BL 24
601713800	4061792218529	Batteri kombihammer	KH 18 LTX BL 24
601713840	4061792218505	Batteri kombihammer	KH 18 LTX BL 24
601713850	4061792218291	Batteri kombihammer	KH 18 LTX BL 24
601714660	4061792218581	Batteri kombihammer	KH 18 LTX BL 24 Q
601714800	4061792218574	Batteri kombihammer	KH 18 LTX BL 24 Q
601714840	4061792218550	Batteri kombihammer	KH 18 LTX BL 24 Q
601714850	4061792218543	Batteri kombihammer	KH 18 LTX BL 24 Q
601714900	4061792218567	Batteri kombihammer	KH 18 LTX BL 24 Q Set ISA
601714930	4061792218598	Batteri kombihammer	KH 18 LTX BL 24 Q Set ISA
601715660	4061792218628	Batteri kombihammer	KH 18 LTX BL 28 Q
601715840	4061792218611	Batteri kombihammer	KH 18 LTX BL 28 Q
601715850	4061792218604	Batteri kombihammer	KH 18 LTX BL 28 Q
601715900	4061792218635	Batteri kombihammer	KH 18 LTX BL 28 Q Set ISA
601715930	4061792218642	Batteri kombihammer	KH 18 LTX BL 28 Q Set ISA

Order no.	EAN-Code	Product name	Type
602247510	4061792207608	Batteri vinkelstiper	W 18 L 9-125
602247840	4061792206991	Batteri vinkelstiper	W 18 L 9-125
602247850	4061792207639	Batteri vinkelstiper	W 18 L 9-125
602247860	4061792206984	Batteri vinkelstiper	W 18 L 9-125
602374510	4061792231146	Batteri vinkelstiper	W 18 L BL 9-125
602374840	4061792231122	Batteri vinkelstiper	W 18 L BL 9-125
602374850	4061792230392	Batteri vinkelstiper	W 18 L BL 9-125
613052510	4061792205376	Batteri vinkelstiper	W 18 LT BL 11-125
613052840	4061792205369	Batteri vinkelstiper	W 18 LT BL 11-125
613052850	4061792205352	Batteri vinkelstiper	W 18 LT BL 11-125
613054650	4061792206106	Batteri vinkelstiper	WB 18 LT BL 11-125 Quick
613054660	4061792206113	Batteri vinkelstiper	WB 18 LT BL 11-125 Quick
613054810	4061792206120	Batteri vinkelstiper	WB 18 LT BL 11-125 Quick
613054840	4061792205390	Batteri vinkelstiper	WB 18 LT BL 11-125 Quick
613054850	4061792205383	Batteri vinkelstiper	WB 18 LT BL 11-125 Quick
601730660	4061792229051	Batteri vinkelstiper	WB 18 LTX BL 15-125 Quick
601730840	4061792229044	Batteri vinkelstiper	WB 18 LTX BL 15-125 Quick
601730850	4061792229068	Batteri vinkelstiper	WB 18 LTX BL 15-125 Quick
613057660	4061792206618	Batteri vinkelstiper	WVB 18 LT BL 11-125 Quick
613057840	4061792206601	Batteri vinkelstiper	WVB 18 LT BL 11-125 Quick
613057850	4061792206199	Batteri vinkelstiper	WVB 18 LT BL 11-125 Quick
601731660	4061792230323	Batteri vinkelstiper	WVB 18 LTX BL 15-125 Quick
601731840	4061792230316	Batteri vinkelstiper	WVB 18 LTX BL 15-125 Quick
601731850	4061792230309	Batteri vinkelstiper	WVB 18 LTX BL 15-125 Quick
613021510	4007430277534	Batteri multikutter	MT 18 LTX
613021840	4007430287700	Batteri multikutter	MT 18 LTX
613021860	4007430334985	Batteri multikutter	MT 18 LTX Compact
613021890	4007430277558	Batteri multikutter	MT 18 LTX
613088800	4061792183933	Batteri multikutter	MT 18 LTX BL QSL
613088840	4061792183940	Batteri multikutter	MT 18 LTX BL QSL
613088850	4061792183957	Batteri multikutter	MT 18 LTX BL QSL
601857840	4007430327345	Batteri sirkelsag	KS 18 LTX 57
601857890	4007430327352	Batteri sirkelsag	KS 18 LTX 57
611857840	4061792237162	Batteri håndsirkelsag	KS 18 LTX 57 BL
611857850	4061792235991	Batteri håndsirkelsag	KS 18 LTX 57 BL
611866810	4061792192157	Batteri håndsirkelsag	KS 18 LTX 66 BL
611866840	4061792192164	Batteri håndsirkelsag	KS 18 LTX 66 BL
611866850	4061792196490	Batteri håndsirkelsag	KS 18 LTX 66 BL
601866810	4061792187511	Batteri dykksag	KT 18 LTX 66 BL
601866840	4061792187498	Batteri dykksag	KT 18 LTX 66 BL
614216650	4061792235847	Batteri kapp- og gjæringssag	KGS 18 LTX BL 216
614216810	4061792235830	Batteri kapp- og gjæringssag	KGS 18 LTX BL 216
614216850	4061792230415	Batteri kapp- og gjæringssag	KGS 18 LTX BL 216
614254650	4061792235878	Batteri kapp- og gjæringssag	KGS 18 LTX BL 254
614254810	4061792235854	Batteri kapp- og gjæringssag	KGS 18 LTX BL 254
614254850	4061792230422	Batteri kapp- og gjæringssag	KGS 18 LTX BL 254
614254920	4061792250932	Batteri kapp- og gjæringssag	KGS 18 LTX BL 254
614305810	4061792235861	Batteri kapp- og gjæringssag	KGS 18 LTX BL 305
614305850	4061792230439	Batteri kapp- og gjæringssag	KGS 18 LTX BL 305
601047840	4061792256644	Batteri stikksag	ST 18 L 90
601047850	4061792256170	Batteri stikksag	ST 18 L 90
601054840	4061792258969	Batteri stikksag	ST 18 LT 130
601054850	4061792258976	Batteri stikksag	ST 18 LT 130
601502840	4061792234024	Batteri stikksag	STA 18 LTX 150 BL
601502850	4061792234017	Batteri stikksag	STA 18 LTX 150 BL
601616840	4061792254473	Batteri sabelsag	SSEP 18 LT
601616850	4061792250246	Batteri sabelsag	SSEP 18 LT
601617840	4061792254497	Batteri sabelsag	SSEP 18 LT BL
601617850	4061792250253	Batteri sabelsag	SSEP 18 LT BL
602258810	4061792220881	Batteri sabelsag	SSEP 18 LTX BL MVT
602258840	4061792220898	Batteri sabelsag	SSEP 18 LTX BL MVT
602258850	4061792220874	Batteri sabelsag	SSEP 18 LTX BL MVT

Order no.	EAN-Code	Product name	Type
600146840	4061792195172	Batteri eksentersliper	SXA 18 LTX 125 BL
600146850	4061792195189	Batteri eksentersliper	SXA 18 LTX 125 BL
600411840	4061792228634	Batteri eksentersliper	SXA 18 LTX 150 BL
600411850	4061792228641	Batteri eksentersliper	SXA 18 LTX 150 BL
602089840	4061792252509	Batteri multi-sliper	SM 18 LTX BL
602089850	4061792252516	Batteri multi-sliper	SM 18 LTX BL
601743660	4061792257283	Batteri overfres	OFV 18 LTX BL 12
601743840	4061792257344	Batteri overfres	OFV 18 LTX BL 12
602082840	4007430325075	Batteri høvel	HO 18 LTX 20-82
602082890	4007430325082	Batteri høvel	HO 18 LTX 20-82
612090800	4061792226784	Batteri spikerpistol	NFR 18 LTX 90 BL
612090840	4061792226791	Batteri spikerpistol	NFR 18 LTX 90 BL
619002800	4007430334671	Batteri popnaglepistol	NP 18 LTX BL 5.0
619002840	4007430334688	Batteri popnaglepistol	NP 18 LTX BL 5.0
619002890	4007430333377	Batteri popnaglepistol	NP 18 LTX BL 5.0
600789500	4061792235601	Batteri fettpresse	FP 18 LTX
600789850	4061792223479	Batteri fettpresse	FP 18 LTX
601613850	4061792204126	Batteri kjedesag	MS 36-18 LTX BL 40
600856500	4061792244597	Batteri beskjæringssag	MS 18 LTX 15
600856840	4061792245419	Batteri beskjæringssag	MS 18 LTX 15
600856850	4061792245402	Batteri beskjæringssag	MS 18 LTX 15
601607650	4061792201767	Batteri løvblåser	LB 18 LTX BL
601607850	4061792176492	Batteri løvblåser	LB 18 LTX BL
602029850	4061792197558	Batteri støvsuger	AS 18 HEPA PC Compact
602028850	4061792197534	Batteri støvsuger	AS 18 L PC Compact
602074850	4061792230620	Batteri støvsuger	AS 36-18 M 30 PC-CC
600794850	4061792247161	Batteri kompressor	AK 18 Multi
601521850	4061792152816	Batteri kompressor	Power 160-5 18 LTX BL OF
601505850	4061792217782	Batteri arbeidslampe	BSA 18 LED 4000
600779850	4061792250000	Batteri radio	RC 12-18 32W BT DAB+